



THIS IS THE SENSOR AND BACK BUTTON MUST BE MADE ACCORDING TO DIMENSIONS

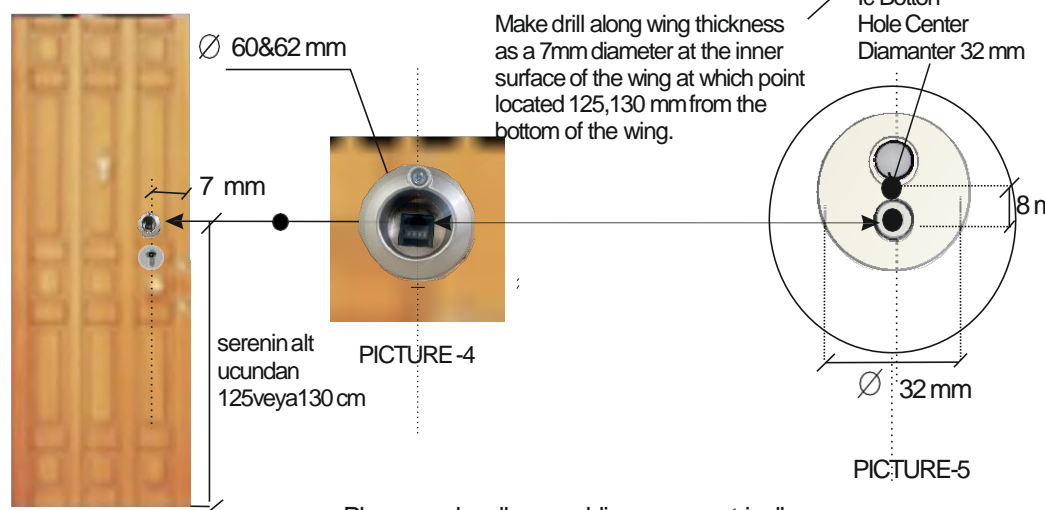

Please make all assemblies as symetrically with reference of barel's axis (as seen in picture).

THIS IS THE SENSOR AND BACK BUTTON MUST BE MADE ACCORDING TO DIMENSIONS

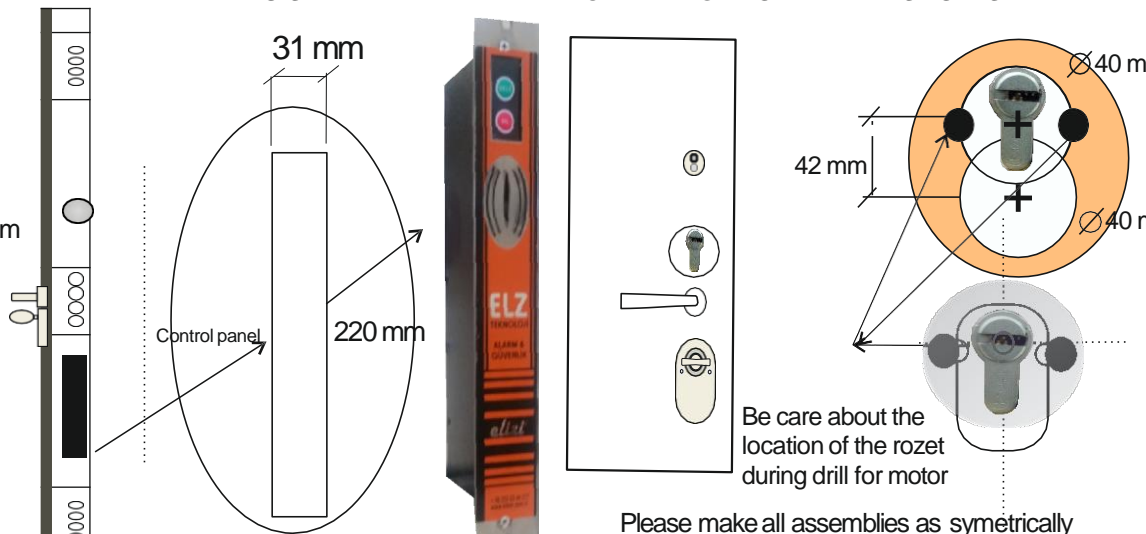

Please make all assemblies as symetrically with reference of barel's axis (as seen in picture).
Be care about the location of the rozet during drill for motor

PICTURE - 2

CONTENS

1. PRODUCT SPECIFICATIONS
2. PRODUCT SE-UP
3. ELİZİ SYSTEM ACTIVATION
3. FIRST MASTER FINGERPRINTSAVING

1. Swconed and ThidMaster Fingerprint
2. User(Wihout master)Fingerprint Saving
4. HOW TO USE ELİZİ SYSTEM

1. Open The Door by using fingerprint Saving
1. Open The door by Mechanicall are Outside
2. Open The door from insaide

3. Lock the door WhenYou are Outsidi
- 4.3.1 lock the door mechanical Key from Outside
- 4.4 Lock the door when you are insaide

5.. DELETİNG FINGERPRENT FROM MEMORY

- 5.1 Deleting saved Fingerpring From Memory
- 5.2. Deleting All Fingerprint From Memory

6. ATTENTIONS SERVISE REQUIRED CASES

Motor is not running although sound and light are coming system
Locking system can not be driven by key or insadle or outside buttons
If there isno light or sound when by key or hander or outside buttons

1

1.SİSTEM ÖZELLİKLERİ

GENERAL SPECIFICATIONS

- > Automatic lock Designed for Steel Doors
- > Control By Mechanical key or Fingerprint.
- > Fingerprint Authority and Control
- > 10.000 Locking and unlocking Battery Performance
- > Locking the door by only Single Button
- > Automatic Locking
- > Alarm Sound 109 dB

Technical Specifications

- > 500 DPI Optik Fingerprint Reader
- > Capacity :3.000 Fingerprint
- > Recognition Time 0.5 s
- > Static current Consumption : 9 uA
- > Lithium-Ion Grup Battery Powered



2



2. Slave (User) Fingerprint Saving

> **Open the door wing and while you are pressing the EKLE button located at the inside frame of the door wing you should press and release the button on the fingerprint reader unit and release the EKLE button also when you hear second warning sound.**

> **First put any one of Master fingerprints on reader and system will give you short alarm sound with BEEB sound if it recognize the master fingerprint. Put immediately your desired fingerprint on reader to save. Please do not move your finger during saving. If your saving is successful, you will hear BEP-BEEP approval sound with three times red and green light will be on respectively and you will hear one short one long alarm voice.**

4. HOW TO USE ELİZİ SYSTEM

1. Opening the Door by Fingerprint While You are Outside

Press shortly the button on the fingerprint reader unit. Optical reader will be activated. Put your fingerprint on reader . If the system recognize your fingerprint, it will open the door lock while green light and approval sound.If the system can not recognize your fingerprint, three times warning sound and red light will come out. This will repeat three times.

- 4.1.1 Opening the Door by Mechanical Key while you are Outside

Insar Mechanical Key and turn it to the opening direction, System will understand you need to open the door and it will open directly

- 4.2. Opening the Door While you are Inside
If the door is locked;

Press shortly to the button (Ic Buton) which is located on the inner surface of the door and turn the handle half tour as open direction and the door will be opened.If the door is closed but no locked;

You should use manual handle to open the door.

5

3. Locking the Door While you are Outside

Close the door wing and press the button on the fingerprint unit and keep pressing till locking the door start. Release the button when locking start.

1. Locking the Door by Mechanical Key.

Close the door wing and insert the mechanical key and turn to the direction of closing and it will lock the door mechanism after half tour. It is recommended to lock by button instead of mechanical key.

4.4 Locking the Door While You are Inside

Close the door wing and press shortly the "Ic Buton" and turn the handle as direction of close. System will recognize you desire to lock the door after half tour turn and it will lock the door.

System can not lock the door mechanism while door wing opened.

5. DELETIN SAVED FINGERPRINTS

1. Deletin Saved User (Slave) Fingerprints

> Open the door wing and while you are pressing the SIL button located at the inside frame of the door wing you should press and release the button on the fingerprint reader unit and release the SIL button also when you hear second warningsound

- > Put Master fingerprint on fingerprint reader..
- > Optical fingerprint reader will search fingerprint for saved Masters. If it recognize master fingerprint, it will sound one short BEEB voice. You will hear 5 s BEEEEEB voice after confirm
- > After this sound, all saved fingerprint except for master fingerprints will be deleted..

6

2. SYSTEM SET UP

Elizi System will be delivered as assembled on your steer door to you.

The first thing you should do is to control emptiness of the memory (it has saved fingerprint or not)
To control emptiness of memory, you should press and release the button on the fingerprint reader.

If there is no record on memory, you will hear triple warning sound with green light meanwhile fingerprint sensor is not searching fingerprint. So now you should save master fingerprint is necessary to save or delete other slave fingerprints (see Part 3.1)

If there is saved fingerprint on memory, you can not hear triple warning sound with green light and fingerprint sensor will be active to search fingerprint in this case, you should first delete all saved fingerprint (see part 5.2).

3. TO ACTIVATE ELİZİ SYSTEM

3.1 Authorized (Master) Fingerprint Saving

> If you save fingerprint while memory is empty, it will be first authorized (Master) fingerprint.

> Open the door wing and while you are pressing the EKLE button located at the inside frame of the door wing you should press and release the button on the fingerprint reader unit and release the EKLE button also when you hear second warning sound.

> Put Fingerprint in (which fingerprint you want save to be authorized (MASTER) on the fingerprint reader Optical reader will read their times and save and red and green light will be on

> If the saving is successful, three times red and green light will be on after you hear T beeb sound

3

5.2. DELETIN ALL FINGERPRINTS

If there are problems with Master fingerprints and if you need to change master fingerprints too, first you should delete all saved records (include masters). After this operation, system will return to original base version. For this operation.

> Open the door wing and while you are pressing both EKLE and SIL button together located at the inside frame of the door wing you should press and release the button on the fingerprint reader.

> Alarm will start to sound. Keep your hand pressed on EKLE and SIL buttons for 10 second when alarm turn OFF.

> You can release EKLE and SIL button after you hear triple BEEB voice.
> 3 kez kırmızı ışık yandıktan sonra sistemdeki bütün parmak izleri silinmiş olur.

All saved fingerprints (include masters) will be deleted after triple red light ON. (if you release EKLE and SIL button shorter than 10 second, alarm will be OFF 2-3 second later but anyone of the saved fingerprint will not be deleted.)

To control memory empty or not;
> Push the button shortly on the fingerprint reader unit and there will be triple warning sound with green light On and OFF while optical reader will not start to search for fingerprint. After this operation, please look at the section

2. SYSTEM SET-UP

6. ATTENTIONS

- > Please read user manual carefully for using system properly.
- > Please be care to protect all system part from water.
- > Do not move magnets because, magnet is used for controlling the door is open or close

7

NOTE:

If your finger have tissue dryness or incision or other corruption, you can have difficulty during saving fingerprint. It is better to select smooth and clear finger as Master fingerprint.

It is recommended that people should have mechanical keys if their fingerprint saving is not achieved properly

All users should save multiple fingerprint to prevent undesired case when save fingerprint has some problem

3.1 Saving second and third Master fingerprint

Open the door wing you should press and release the button on the fingerprint reader unit and release the EKLE button also when you hear second warning sound First Put

Master fingerprint on reader and system will give you short alarm sound with BEEB sound if it reorganize the master fingerprint. Put immediately your desired fingerprint on reader to save. Please do to move your finger during saving. If your saving is successful, you will hear BEP-BEEP approval sound with three times red and green light will be on respectively and you will hear one short one long alarm voice.

> If your saving is successful, you will hear BEP-BEEP approval sound with three times red and green light will be on respectively and you will hear one short one long alarm voice.

> Please follow same procedure as second master fingerprint saving to save third master fingerprint

4

> Mechanical parts should be well assembled to have better performance from ELIZI system.

> If you have not well assembled doors like lock hole is not correspond to lock shaft or door has some flexity or door sag. You should first call your door company to solve problem.

> Master parmak, diğer parmak izlerinin kaydedilmesi ve silinmesi için yetkili olduğundan master parmak sahibinin dikkatli seçilmesi unutulmamalıdır.

> If you can not achieve saving or deleting fingerprint, you should wait till all warning and light will be OFF and then you should repeat your process.

> Be care about timing during operations, if you can not apply suitable timing like lately putting your hand on reader or pressing button longer than it needs, the operation will fails. You should repeat operation for this cases..

> If the wing of the door is open, system only work to open the lock, you can not lock the door for this case

> If system is not locking fully during the lock operation, there will be some physical prevent. Please control door wing absolutely closed.

If it still have fully lock problem, call your door company to solve problem.

> Call you door company to change battery.
> If there is problem in ELIZI system, call immediately authorized technical service.

Undesired event (include loss of life) can cause because of the non-authorized person operation because system has higher current capacity battery group.

> Our company will not be responsible for any damage if non authorized person interfering..

> It is necessary to return back older battery group during battery change.

8